

SAFETY GUIDE FOR MACHINE OPERATORS



This machine is intended for commercial use only by trained and qualified operators. It is only to be operated in the manner for which it has been designed: to scrub, polish, clean, and restore hard surface flooring and baseboards in an indoor environment.


All Operators must read, understand and practice the following safety precautions.

|  WARNING: Fire or Explosion Hazard |  WARNING: Electrical Hazard |  WARNING: Electrical Shock Hazard |
|---|--|--|
| <p>Never use flammable liquids or operate the machine in or near flammable liquids, vapors or combustible dusts. This machine is not equipped with an explosion proof motor. The electric motor will spark upon start up and during operation which could cause a flash fire or explosion if the machine is used in an area where flammable vapors/liquids or combustible dusts are present.</p> | <p>Do not operate the machine with a damaged power cord. Do not modify the plug. Unplug power before servicing machine. If the power supply cord is damaged or broken, it must be replaced by the manufacturer or the manufacturer's service agent or a similarly qualified technician to avoid a hazard.</p> | <p>Do not use outdoors. Do not expose the machine to rain. Always store the machine indoors.</p> |

GROUNDING INSTRUCTIONS:

This machine must be grounded whenever it is in use to reduce the risk of electrical shock. The plug must be used in an appropriate power outlet that is properly installed in accordance with all local codes. Do not remove the ground pin. Replace damaged plug before use.

This machine is for use on a nominal 110-Volt circuit and has a grounding attachment plug that looks like the plug illustrated. Make sure that the machine is connected to an outlet having the same configuration as the plug. Do not use an adaptor with this machine.

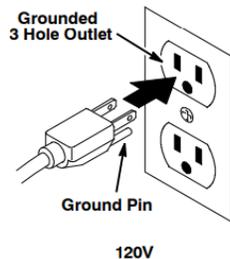

BEFORE USING A CENTAUR FLOOR MACHINE:

1. Read and follow all the safety guidelines (provided in this document).
2. Do not operate the machine with or near flammable liquids or flammable vapors as an explosion or flash fire may occur.
3. Do not operate the machine unless you have been trained on the use of this equipment and are authorized to use it.
4. Do not operate the machine unless the power cord is properly grounded.
5. Do not operate the machine with a damaged cord or plug.
6. Do not operate the machine with the use of an extension cord.
7. Do not operate the machine if it is not in proper operating condition.
8. Do not operate the machine in outdoor areas.
9. Do not operate the machine in standing water.

WHEN USING THE MACHINE:

1. Stay clear of the spinning pad.
2. Do not pull the machine by the plug or cord.
3. Do not run the machine over the cord.
4. Do not pull cord around sharp edges or corners.
5. Do not close doors on cord.
6. Do not unplug by pulling on cord.
7. Do not stretch the cord.
8. Do not handle plugs with wet hands.
9. Keep cord away from heated surfaces.
10. Never activate the power when the handle is in the upright position.
11. Do not release handle grips until the pad comes to a complete stop.
12. Go slow on inclines and slippery surfaces.
13. Wear non-slip, steel toe safety boots.
14. Stop using the machine immediately if you experience faulty operation or notice damage.
15. Do not allow children or adults to play on or around the machine.

BEFORE STARTING THE MACHINE:

1. Make sure all safety devices are in place and operate properly.
2. Remove loose objects from the floor area where you are working to prevent injury and damage.
3. Place "wet floor" signs as needed and restrict access to others to prevent injury.

SERVICING THE MACHINE:

1. We recommend using manufacturer supplied replacement parts to ensure proper operation of the machine.
2. All repairs must be performed by a qualified service technician.
3. Do not modify the machine from its original design.
4. Contact Centaur Floor Machines to identify a qualified service center in your area.

OPERATING THE MACHINE



WARNING: Do not operate this machine unless you have read and understood the Safety Guide (this document)

GENERAL OPERATION:

1. Always make sure your pad driver is properly secured to the gearbox under the machine.
2. Make sure when using a pad driver with a center-lock, that the center-lock is recessed below the pad surface. This must be checked before operation. Failing to do so, may result in damage to the center-lock and/or to the floor surface.
3. Before starting make sure to adjust the handle to a comfortable operating height.
4. Before starting make sure that the safety switch on the handle grip is operating properly. If it is not operating properly, do not use the machine until this issue has been rectified.
5. Do not operate the machine in the same spot for a long period of time as it may result in floor damage.
6. To maneuver the machine over thresholds and floor grates, stop the machine and tilt it back on the transport wheels, and move it to the desired position. Never attempt to operate the machine over a threshold or grate as this may result in injury, damage to the machine and to property.
7. When the machine is not in use, remove all pad drivers and pads to ensure that these items do not suffer premature wear.

Use only recommended pads/brushes and commercially available floor cleaners and waxes intended for use with this machine.



ATTENTION: If you feel like you are losing control of the machine, immediately release the handle grip and step away from the machine as quickly as possible. The safety switch in the handle grip will automatically reset and the machine will come to a stop. Failing to let go of the handle bar may cause personal injury and damage to property.

MACHINE MAINTENANCE:

1. Remove and clean the pad driver or brush after each use.
2. Clean the machine base after each use, clean the bottom edges of SplashGuard to remove debris.
3. Inspect the power cord for damage after each use. If worn or damaged, replace immediately. Do not use the machine if the power cord is damaged.
4. Wipe the power cord with damp cloth and neatly coil it around the cord hook (located on the lower portion of the handle) and handle bar after each use. Use the supplied Velcro wrap strap to secure cord
5. Periodically check that all nuts, bolts, screws are properly tightened.
6. [Rabbit 3 and Stonechat ONLY] When the red light appears on top of motor cover, it is time to replace your motor brushes. Only use an authorized Centaur Service Center—contact Centaur Floor Machines for further information. 905-475-5640



STORING & TRANSPORTING THIS MACHINE:

1. Unplug the power cord from the wall outlet and remove the pad driver/brush from the machine.
2. Neatly coil the cord around the cord hook (located on the lower portion of the handle) and handle bar to prevent cord damage. Secure cord with supplied Velcro wrap strap.
3. Use tie-down straps to secure the machine to the truck or trailer.
4. Ensure machine is stored at 5 Celsius (41 Fahrenheit) or higher at all times