




# SAFETY GUIDE FOR MACHINE OPERATORS



This machine is intended for commercial use only by trained and qualified operators. It is only to be operated in the manner for which it has been designed: to scrub, polish, clean, and restore hard surface flooring and baseboards in an indoor environment.


**All Operators must read, understand and practice the following safety precautions.**

 <b>WARNING:</b> Fire or Explosion Hazard	 <b>WARNING:</b> Electrical Hazard	 <b>WARNING:</b> Electrical Shock Hazard
<p><b>Never use flammable liquids or operate the machine in or near flammable liquids, vapors or combustible dusts.</b> This machine is not equipped with an explosion proof motor. The electric motor will spark upon start up and during operation which could cause a flash fire or explosion if the machine is used in an area where flammable vapors/liquids or combustible dusts are present.</p>	<p><b>Do not operate the machine with a damaged power cord. Do not modify the plug. Unplug power before servicing machine.</b> If the power supply cord is damaged or broken, it must be replaced by the manufacturer or the manufacturer's service agent or a similarly qualified technician to avoid a hazard.</p>	<p><b>Do not use outdoors. Do not expose the machine to rain. Always store the machine indoors.</b></p>

## GROUNDING INSTRUCTIONS:

This machine must be grounded whenever it is in use to reduce the risk of electrical shock. The plug must be used in an appropriate power outlet that is properly installed in accordance with all local codes. Do not remove the ground pin. Replace damaged plug before use.

*This machine is for use on a nominal 110-Volt circuit and has a grounding attachment plug that looks like the plug illustrated. Make sure that the machine is connected to an outlet having the same configuration as the plug. Do not use an adaptor with this machine.*

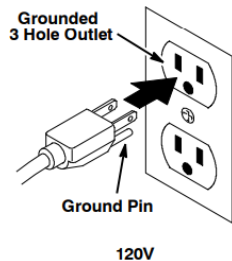

## BEFORE USING A CENTAUR FLOOR MACHINE:

1. Read and follow all the safety guidelines (provided in this document).
2. Do not operate the machine with or near flammable liquids or flammable vapors as an explosion or flash fire may occur.
3. Do not operate the machine unless you have been trained on the use of this equipment and are authorized to use it.
4. Do not operate the machine unless the power cord is properly grounded.
5. Do not operate the machine with a damaged cord or plug.
6. Do not operate the machine with the use of an extension cord.
7. Do not operate the machine if it is not in proper operating condition.
8. Do not operate the machine in outdoor areas.
9. Do not operate the machine in standing water.

## WHEN USING THE MACHINE:

1. Stay clear of the spinning pad.
2. Do not pull the machine by the plug or cord.
3. Do not run the machine over the cord.
4. Do not pull cord around sharp edges or corners.
5. Do not close doors on cord.
6. Do not unplug by pulling on cord.
7. Do not stretch the cord.
8. Do not handle plugs with wet hands.
9. Keep cord away from heated surfaces.
10. Never activate the power when the handle is in the upright position.
11. Do not release handle grips until the pad comes to a complete stop.
12. Go slow on inclines and slippery surfaces.
13. Wear non-slip, steel toe safety boots.
14. Stop using the machine immediately if you experience faulty operation or notice damage.
15. Do not allow children or adults to play on or around the machine.

## BEFORE STARTING THE MACHINE:

1. Make sure all safety devices are in place and operate properly.
2. Remove loose objects from the floor area where you are working to prevent injury and damage.
3. Place “wet floor” signs as needed and restrict access to others to prevent injury.

## SERVICING THE MACHINE:

1. We recommend using manufacturer supplied replacement parts to ensure proper operation of the machine.
2. All repairs must be performed by a qualified service technician.
3. Do not modify the machine from its original design.
4. Contact Centaur Floor Machines to identify a qualified service center in your area.

## OPERATING THE MACHINE



**WARNING:** Do not operate this machine unless you have read and understood the Safety Guide (this document)

## GENERAL OPERATION:

1. Always make sure your pad driver is properly secured to the gearbox under the machine.
2. Make sure when using a pad driver with a center-lock, that the center-lock is recessed below the pad surface. This must be checked before operation. Failing to do so, may result in damage to the center-lock and/or to the floor surface.
3. Before starting make sure to adjust the handle to a comfortable operating height.
4. Before starting make sure that the safety switch on the handle grip is operating properly. If it is not operating properly, do not use the machine until this issue has been rectified.
5. Do not operate the machine in the same spot for a long period of time as it may result in floor damage.
6. To maneuver the machine over thresholds and floor grates, stop the machine and tilt it back on the transport wheels, and move it to the desired position. Never attempt to operate the machine over a threshold or grate as this may result in injury, damage to the machine and to property.
7. When the machine is not in use, remove all pad drivers and pads to ensure that these items do not suffer premature wear.

**Use only recommended pads/brushes and commercially available floor cleaners and waxes intended for use with this machine.**



**ATTENTION:** If you feel like you are losing control of the machine, immediately release the handle grip and step away from the machine as quickly as possible. The safety switch in the handle grip will automatically reset and the machine will come to a stop. Failing to let go of the handle bar may cause personal injury and damage to property.

## MACHINE MAINTENANCE:

1. Remove and clean the pad driver or brush after each use.
2. Clean the machine base after each use, clean the bottom edges of SplashGuard to remove debris.
3. Inspect the power cord for damage after each use. If worn or damaged, replace immediately. Do not use the machine if the power cord is damaged.
4. Wipe the power cord with damp cloth and neatly coil it around the cord hook (located on the lower portion of the handle) and handle bar after each use. Use the supplied Velcro wrap strap to secure cord
5. Periodically check that all nuts, bolts, screws are properly tightened.
6. [Rabbit 3 and Stonechat ONLY] When the red light appears on top of motor cover, it is time to replace your motor brushes. Only use an authorized Centaur Service Center—contact Centaur Floor Machines for further information. 905-475-5640



## STORING & TRANSPORTING THIS MACHINE:




1. Unplug the power cord from the wall outlet and remove the pad driver/brush from the machine.
2. Neatly coil the cord around the cord hook (located on the lower portion of the handle) and handle bar to prevent cord damage. Secure cord with supplied Velcro wrap strap.
3. Use tie-down straps to secure the machine to the truck or trailer.
4. Ensure machine is stored at 5 Celsius (41 Fahrenheit) or higher at all times

# GUIDE DE SÉCURITÉ POUR LES OPÉRATEURS DE MACHINES



Cette machine est destinée à un usage commercial uniquement par des opérateurs formés et qualifiés. Elle ne peut être utilisée que de la façon pour laquelle elle a été conçue : pour frotter, polir, nettoyer et restaurer les revêtements de sol durs et les plinthes dans un environnement intérieur.


Tous les opérateurs doivent lire, comprendre et appliquer les mesures de sécurité suivantes.

 <b>AVERTISSEMENT :</b> Risque d'incendie ou d'explosion	 <b>AVERTISSEMENT :</b> Risque de choc électrique	 <b>AVERTISSEMENT :</b> Risque d'incendie ou d'explosion
<b>N'utilisez jamais de liquides inflammables et ne faites pas fonctionner la machine dans ou à proximité de liquides, de vapeurs ou de poussières inflammables.</b> Cette machine n'est pas équipée d'un moteur antidéflagrant. Le moteur électrique produira des étincelles au démarrage et durant le fonctionnement, ce qui pourrait provoquer un incendie ou une explosion si la machine est utilisée dans un endroit où des vapeurs/liquides inflammables ou des poussières combustibles sont présents.	<b>Ne pas utiliser la machine avec un cordon d'alimentation endommagé. Ne modifiez pas la fiche. Débranchez la machine avant de la réparer.</b> Si le cordon d'alimentation est endommagé ou brisé, il doit être remplacé par le fabricant ou l'agent de service du fabricant ou un technicien de qualification similaire afin d'éviter tout danger.	<b>Ne pas utiliser à l'extérieur. N'exposez pas la machine à la pluie. Entreposez toujours la machine à l'intérieur.</b>

## CONSIGNES DE MISE À LA TERRE :

Cette machine doit être mise à la terre lorsqu'elle est utilisée afin de réduire le risque de choc électrique. La fiche doit être utilisée dans une prise de courant appropriée, correctement installée et conforme à la réglementation locale. Ne retirez pas la broche de mise à la terre. Remplacez la fiche endommagée avant d'utiliser l'appareil.

*Cette machine est destinée à être utilisée sur un circuit nominal de 110 volts et est équipée d'une fiche de mise à la terre ressemblant à la fiche illustrée. Assurez-vous que la machine est connectée à une prise ayant la même configuration que la fiche. N'utilisez pas d'adaptateur avec cette machine.*

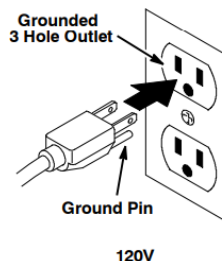

## AVANT D'UTILISER UNE MACHINE À PLANCHER CENTAUR :

1. Lisez et suivez toutes les consignes de sécurité (fournies dans ce document).
2. Ne faites pas fonctionner la machine avec ou à proximité de liquides ou de vapeurs inflammables, car une explosion ou un feu instantané risqueraient de se produire.
3. N'utilisez pas la machine si vous n'avez pas été formé à l'utilisation de cet équipement et si vous n'êtes pas autorisé à l'utiliser.
4. Ne faites pas fonctionner la machine si le cordon d'alimentation n'est pas correctement mis à la terre.
5. Ne faites pas fonctionner la machine avec un cordon ou une fiche endommagés.
6. Ne faites pas fonctionner la machine en utilisant une rallonge électrique.
7. N'utilisez pas la machine si elle n'est pas en bon état de fonctionnement.
8. Ne faites pas fonctionner la machine à l'extérieur.
9. N'utilisez pas la machine dans de l'eau stagnante.

## LORS DE L'UTILISATION DE LA MACHINE :

1. Tenez-vous à bonne distance du tampon rotatif.
2. Ne tirez pas la machine par la fiche ou le cordon.
3. Ne faites pas passer la machine sur le cordon.
4. Ne tirez pas le cordon autour des bords ou des coins tranchants.
5. Évitez de fermer les portes sur le cordon.
6. Ne débranchez pas en tirant sur le cordon.
7. Évitez d'étirer le cordon.
8. Ne manipulez pas les fiches avec des mains mouillées.
9. Maintenez le cordon à l'écart des surfaces chauffées.
10. Ne mettez jamais l'appareil en marche lorsque la poignée est en position verticale.
11. Ne relâchez pas les poignées avant l'arrêt complet de l'appareil.
12. Avancez lentement sur les pentes et les surfaces glissantes.
13. Portez des bottes de sécurité antidérapantes à embout d'acier.
14. Cessez immédiatement d'utiliser la machine si vous constatez un mauvais fonctionnement ou des dommages.
15. Ne laissez pas les enfants ou les adultes jouer sur ou à proximité de la machine.

## AVANT DE METTRE LA MACHINE EN MARCHÉ :

1. Assurez-vous que tous les dispositifs de sécurité sont en place et fonctionnent correctement.
2. Retirez les objets du plancher où vous travaillez pour éviter les blessures et les dommages.
3. Placez des panneaux « plancher mouillé » au besoin et limitez l'accès aux autres pour éviter les blessures.

## ENTRETIEN DE LA MACHINE :

1. Nous recommandons d'utiliser les pièces de rechange fournies par le fabricant afin d'assurer le bon fonctionnement de la machine.
2. Toutes les réparations doivent être effectuées par un technicien qualifié.
3. Ne modifiez pas la machine par rapport à sa conception originale.
4. Contactez les Machines à Plancher Centaur pour trouver un centre de service qualifié dans votre région.

## UTILISATION DE LA MACHINE



**AVERTISSEMENT :** N'utilisez pas cette machine sans avoir lu et compris le guide de sécurité (ce document).

## FONCTIONNEMENT GÉNÉRAL :

1. Veillez toujours à ce que le tampon soit correctement fixé à la boîte de direction sous la machine.
2. Assurez-vous, lorsque vous utilisez un tampon avec un verrou central, que celui-ci soit encastré sous la surface du tampon. Ceci doit être vérifié avant l'utilisation. Si vous ne le faites pas, vous risquez d'endommager le verrou central et/ou la surface du sol.
3. Avant de commencer, veillez à régler la poignée à une hauteur de travail confortable.
4. Avant de commencer, vérifiez que l'interrupteur de sécurité situé sur la poignée de la machine fonctionne correctement. S'il ne fonctionne pas correctement, n'utilisez pas la machine tant que le problème n'a pas été résolu.
5. Évitez de faire fonctionner la machine au même endroit durant une longue période, car cela pourrait endommager le sol.
6. To maneuver the machine over thresholds and floor grates, stop the machine and tilt it back on the transport wheels, and move it to the desired position. Never attempt to operate the machine over a threshold or grate as this may result in injury, damage to the machine and to property.
7. When the machine is not in use, remove all pad drivers and pads to ensure that these items do not suffer premature wear.

**Use only recommended pads/brushes and commercially available floor cleaners and waxes intended for use with this machine.**



**ATTENTION: If you feel like you are losing control of the machine, immediately release the handle grip and step away from the machine as quickly as possible. The safety switch in the handle grip will automatically reset and the machine will come to a stop. Failing to let go of the handle bar may cause personal injury and damage to property.**

## MACHINE MAINTENANCE:

1. Remove and clean the pad driver or brush after each use.
2. Clean the machine base after each use, clean the bottom edges of SplashGuard to remove debris.
3. Inspect the power cord for damage after each use. If worn or damaged, replace immediately. Do not use the machine if the power cord is damaged.
4. Wipe the power cord with damp cloth and neatly coil it around the cord hook (located on the lower portion of the handle) and handle bar after each use. Use the supplied Velcro wrap strap to secure cord
5. Periodically check that all nuts, bolts, screws are properly tightened.
6. [Rabbit 3 and Stonechat ONLY] When the red light appears on top of motor cover, it is time to replace your motor brushes. Only use an authorized Centaur Service Center—contact Centaur Floor Machines for further information. 905-475-5640

## RANGEMENT & TRANSPORT DE CETTE MACHINE :

1. Débranchez le cordon d'alimentation de la prise murale et retirez la brosse/le tampon de la machine.
2. Enroulez soigneusement le cordon autour du crochet à cordon (situé sur la partie inférieure de la poignée) et du manche pour éviter d'endommager le cordon. Fixez le cordon à l'aide de la bande Velcro fournie.
3. Utilisez des sangles de fixation pour attacher la machine au camion ou à la remorque.
4. Veillez à ce que la machine soit toujours entreposée à une température de 5°C (41°F) ou plus.