


How to replace socket with the Saddle page 2




Drill hole with a size "D" drill bit (incl. in the kit)




Deburr hole on both side.

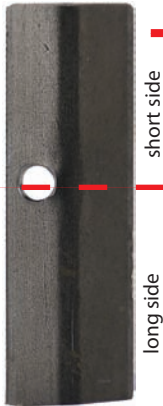

Collar Stop Bar

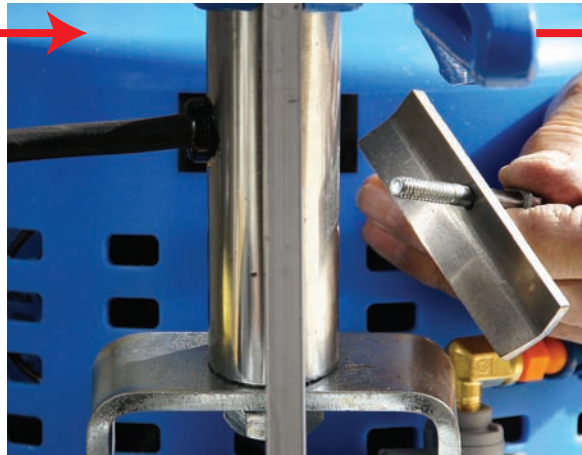

Place 1/4" bolt in hole, add flat washer and let the **LONG** side hang down then tighten the nut.

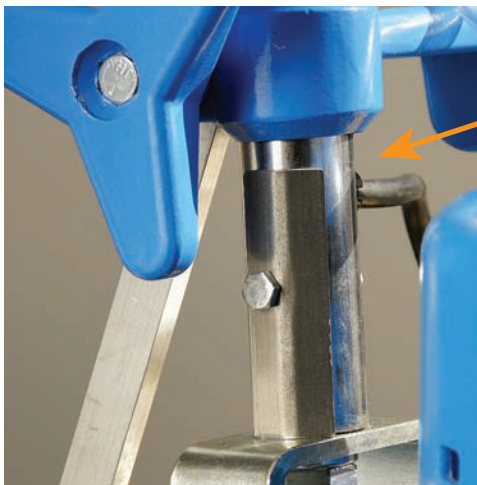

The Collar Stop Bar will stop the collar just a shade above the cable so the collar won't be able to shear off the cable.

Replace adjusting bar with the longer one included in the package.



The job is finished. Well done.