



## PumpHouse for Rabbit-5 part # 2F01049


Top view

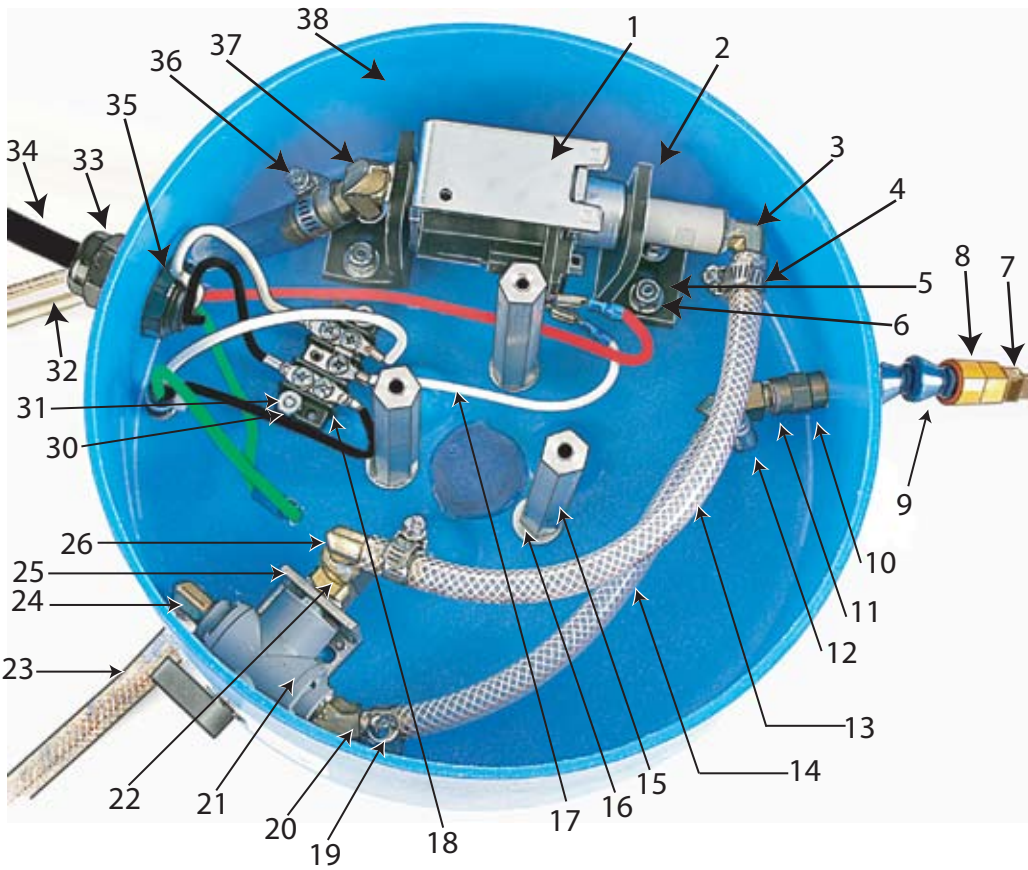

1. 2F01000 Pump for Rabbit-5-6 (110v)
2. 2F01010 Mounting rubber bracket
3. 2F01065 Elbow 45 1/8NPT 1/4 Hosebarb
4. 1K20000 Hose clamp
5. 6K02000 Flat washer #10
6. 6D02301 Hex nut 10-32 nylon insert

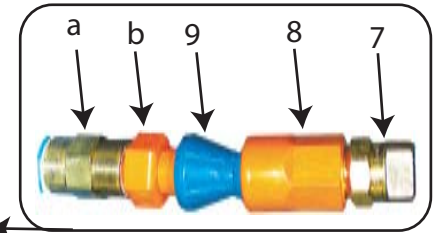

Bottom view

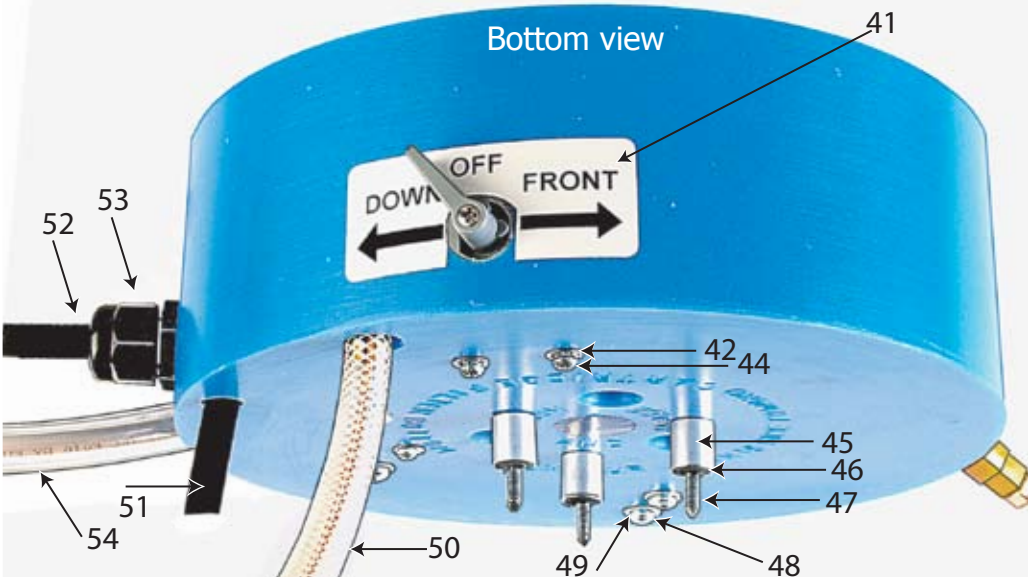

- a. 2F01070 PIPE COUPLING 1/8 to 1/8
- b. 2A88827 CONNECTOR 1/8" NPT
- c. Nozzle Assy. tip #1
- d. Nozzle Assy. tip #2
- e. Nozzle Assy. tip #3
7. 2F01056 Spray Tip #1
7. 2F01035 Spray Tip #2
7. 2F01036 Spray Tip #3
8. 2A88827 Connector 1/8" NPT
9. 2F01059 Loc-Line Socket to NPT
10. 2F01070 Pipe Coupling 1/8 to 1/8
11. 2F01067 Hose barb 1/8 NPT
12. 1K20000 Hose clamp 5/8" dia
13. 1K29021 Hose (Braided) 1/4" 8"
14. 1K29021 Hose (Braided) 1/4" 7"
15. 2F01090 Stand off. Aluminium
16. 6K02000 Washer, flat #10
17. 2E50001 Connecting wire orange
18. 7D62601 Terminal block
19. 1K20000 Hose clamp 5/8" dia
20. 2F01067 Hose barb 1/8 NPT thread
21. 2A88844 Valve, 2 way
22. 2A88837 Pipe elbow
23. 1K29021 Hose (Braided) 1/4" dia. 8 inches
24. 2F01065 Elbow 45 1/8NPT 1/4 Hb
25. 2F01012 Mounting bracket
26. 2F01065 Elbow 45 1/8NPT 1/4 Hosebrb

30. 6D01803 Hex nut 6-32
31. 6K01803 Lock washer #6
32. 9K10144 Clear Tubing 3/8" id 18.5" lng
33. 2E90805 Strain reliever
34. 7C54508 Tube cable Rabbit06 & R-5
35. 6D04600 Nylon nut 13/16"
36. 1K20000 Hose clamp 5/8" dia
37. 2F01063 Street elbow 45 degree
38. 9X01030 Pumphouse whitout hardware.
41. 2A80501 Label for valve orientation new#

42. 6A05700 Mach Screw 6-32x5/8
44. 6K01901 Washer Flat S.S. #8
45. 2E50036 Stand OFF, Long 0.55"
46. 6D02203 Push nut #10
47. 6A20400 Machine screw 10x32x2 1/4"
48. 6A19000 Macine screw 10-32x5/8
49. 6K02000 Flat washer #10
50. 1K29021 Hose (Braided) 1/4" 8inch
51. Motor cable. (part of the motor)
52. 7C54508 Tube cable Rabbit-5 and 6
54. 9K10144 Clear Tubing 3/8" id 18.5" lng

Not shown. **2F01033 Pumphouse TOP**